

Model 206 Fireside Burner Pan Replacement

Please read all the instructions before you begin the procedure. Confirm that you have all the necessary tools and materials. If you have any questions, technical support is available at 1-800-866-4344, Monday- Saturday 9:00-5:00 ET.

Tools Needed:

- 7/16" wrench or socket (optional)
- 5/16 nut driver
- Needle nose pliers, or, wire window clip tool (included with stove)
- Vacuum cleaner


Materials Needed:

- Replacement burner pan #G-41


1. Make sure the stove (including the pilot light) is off and cool.
2. Turn off the gas supply at the shut off valve.
3. Remove the cast iron front. Lift up from under the decorative stars, and swing the bottom out away from the stove.



4. Remove the glass and frame assembly. It is held in place by four spring loaded clips. Pull them straight out and turn them away from the frame. It may be helpful to grab them with pliers or the wire window clip tool that was sent with the stove.

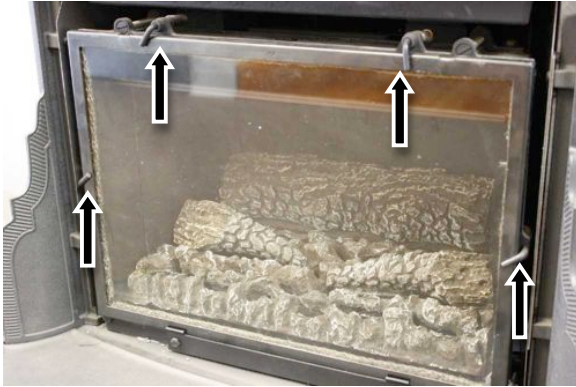

5. Lift the glass and frame assembly out of the bottom glass retainer. (If need be, use the 7/16" wrench to loosen the 2 glass retainer bolts to facilitate the glass and frame removal.) Once the glass is removed, remove the glass retainer completely.

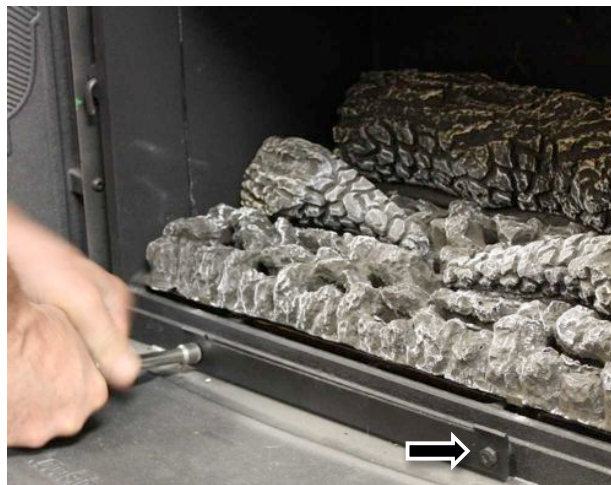

6. Carefully remove the log set from the firebox.
7. **The log set is fragile.** It is best supported from under the base. Do not try to hold on to the log sections on the top side.



8. Using the 5/16" nut driver, loosen the burner pan screw far enough to release the burner pan.




9. Remove the old pan by lifting up at an angle then toward you.



10. Insert the new pan making sure that the tube is centered over the gas orifice located at the bottom rear center of the firebox. Once in place, reinstall the locking screw

11. Proper placement of the log set is important to ensure good stove performance and flame appearance. The burner pan has five elevated tabs (three along the back edge and two along the front edge) that keep the base of the log set from resting directly on the surface of the burner. Be sure the log set is as far back in the firebox as possible. The front tabs have small vertical sections that should be visible in front of the log set base. Improperly placed log sets can result in low or irregular flames as well as excessive carbon build up.

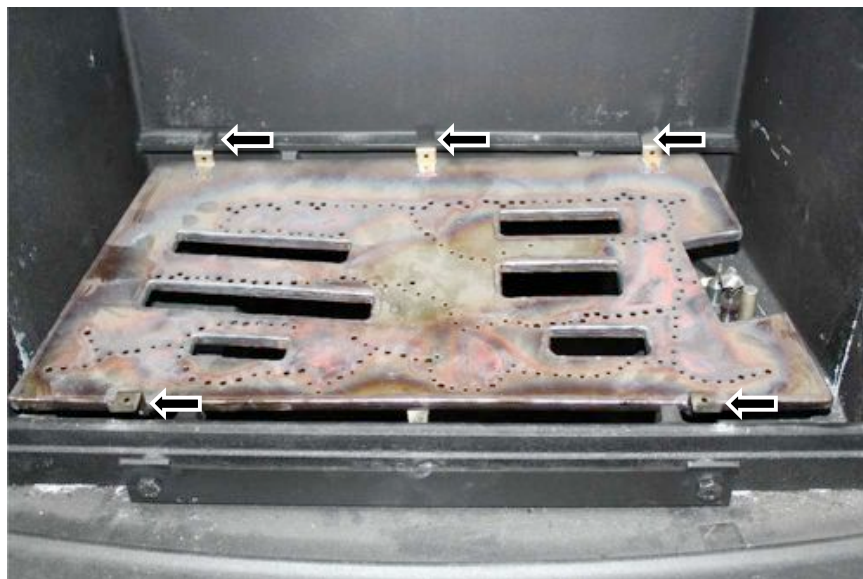

12. Replace the glass and frame assembly. Be sure the frame is tucked firmly into the glass retainer and is centered on the front of the firebox. Secure it to the firebox with the spring loaded clips. Use needle nose pliers to grip the clips if necessary.

13. Return the cast iron front to the stove. Tuck the top in first and then swing the bottom in towards the stove.

14. Turn on the gas supply and light your stove according to the lighting instructions.

We need your help! Woodstock Soapstone Co. takes pride in providing the highest quality products as well as the best customer service in our industry. We welcome your suggestions and input to help us achieve these goals. If you have any comments to improve our products, service, and information provided in these instructions please contact us at (800) 866-4344 or info@woodstove.com. Thank you.

Revised 8/29/16