

## Part#K-395: Rear Heat Shield Kit


Rev. Date 8/2/2021

### Parts Needed:

- (1) K-395 Center panel
- (2) K-395 Side panels
- (2) 1/4-20 x 1/2" (installed on stove)
- (2) 1/4-20 x 5/8" (installed on stove)
- (4) 1/4" Washer (installed on stove)



### Tools Needed:

- 7/16" open ended wrench
- Metal shears (if rear venting)
- Safety glasses & gloves

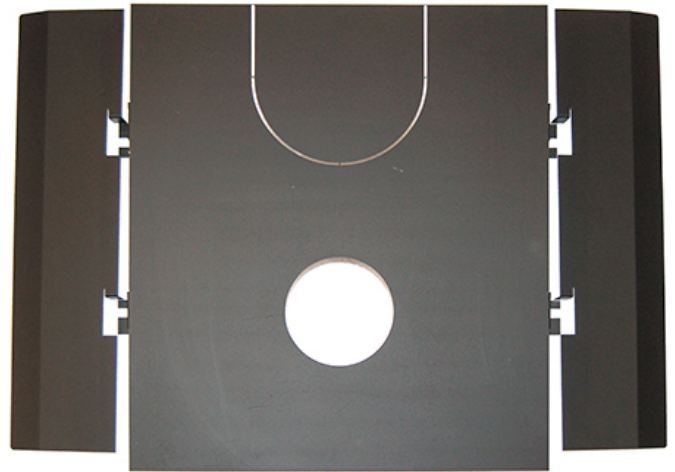

Please read all the instructions before you begin the procedure. Confirm that you have all of the necessary tools and parts required. If you have any questions, technical support is available toll free at 1-800-866-4344, Monday-Friday 9:00-5:00 (ET) & Saturday 9:00-12:00 (ET). Videos can be found on our Woodstock Soapstone Co. YouTube page.

- Using a 7/16" wrench, remove the four bolts and washers at the rear of the stove. It is best to move the air damper to a position parallel to the hearth for ease of access.

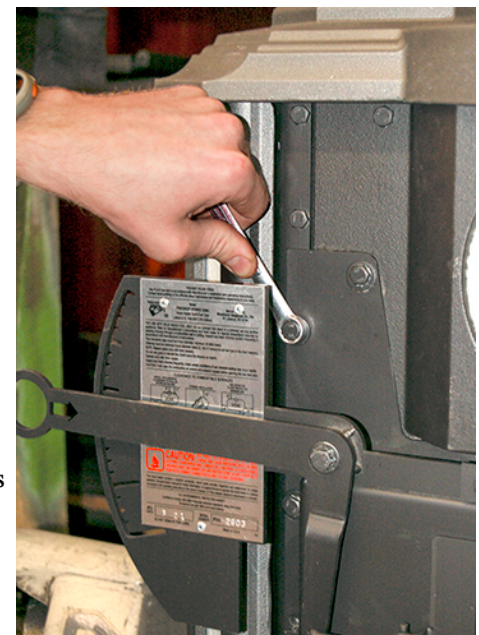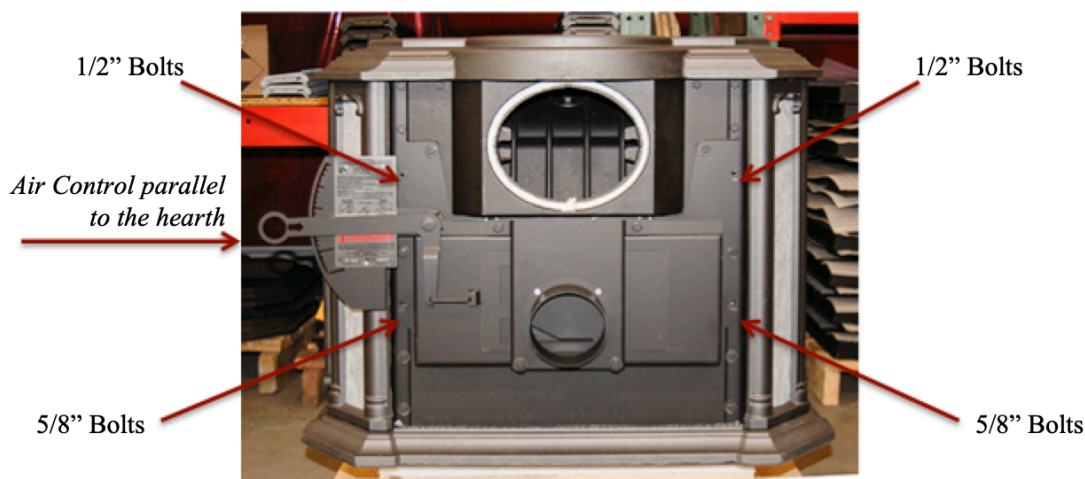

Woodstock  
Soapstone  
Company, Inc.

66 Airpark Rd., West Lebanon, NH 03784  
Phone: 1-800-866-4344  
Email: [info@woodstove.com](mailto:info@woodstove.com)  
Web: [www.woodstove.com](http://www.woodstove.com)

2. Place the center panel over the air intake. **If rear venting, cut out the removable “U” shaped panel first (see image below).**

The tabs of the shield will line up with the four bolt holes.


**Note:** The two top bolts are shorter (1/2”) and the bottom two are longer (5/8”). With the center panel in place, replace the bolts and washers, finger tighten until all four are in place, then tighten all four completely.



*Place center panel over the air intake*



*Reinstall hardware to secure center shield (1/2” on top & 5/8” on bottom)*

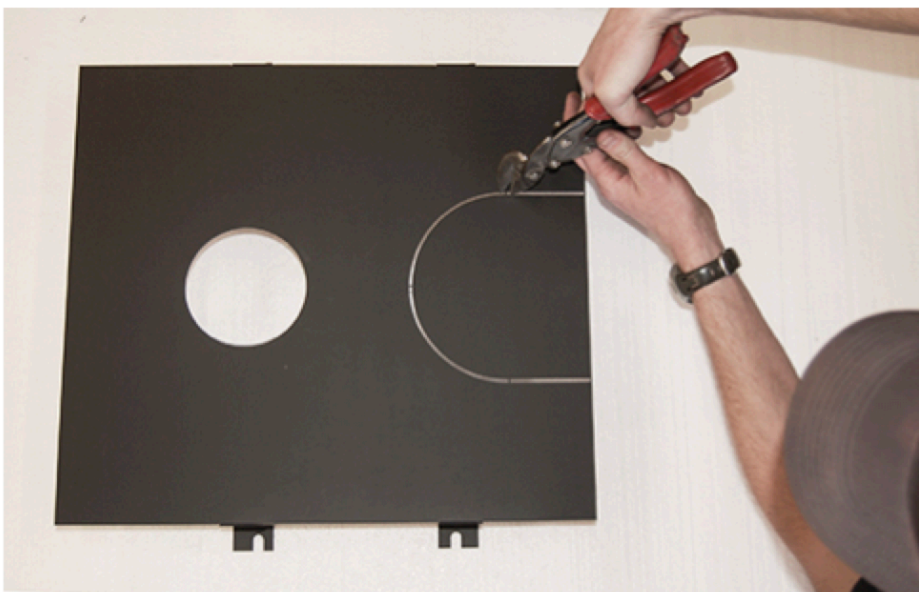

**If rear venting,** remove the “U” shaped panel using metal shears



3. With the center panel secured in place, align the notches of the center and side panels and slide down into place. The installation is now complete.



*Slide first side panel down into position*



*Slide the second side panel down into position. The rear heat shield installation is now complete*