

Absolute Steel Flue Collar Gasket

Please read all the instructions before you begin the procedure. Confirm that you have all the necessary tools and materials. If you have any questions, technical support is available toll free at 1-800-866-4344, Monday-Saturday 9:00 – 5:00 ET


Tools Needed:

- putty knife
- wire brush
- shop vac
- scissors
- 1/2" wrench or socket
- PB Blaster (or similar)

Materials Needed:

- 3' of 1/8" (0.125) thick split window gasket (you will trim to fit)
- antiseize

Spray the 4 bolts with PB Blaster or similar penetrant. Let it work for 10-15 minutes. Using a 1/2" wrench or socket, remove the 4 bolts that fasten the collar to the stove. Remove the collar and place it upside down on a bench.

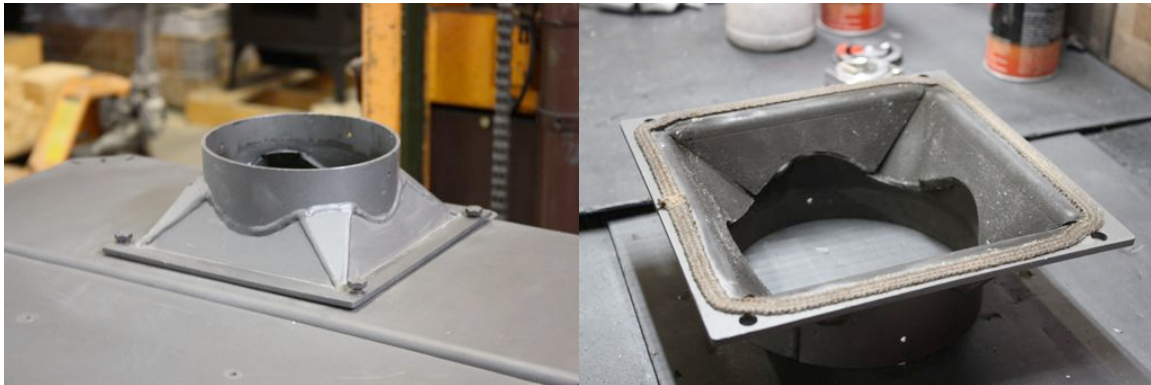


Pull off the old gasket and, using a putty knife (or wire brush) and shop vac, clean the surface of any residue.



One edge of the flue collar has a small notch. This edge will face the back of the stove when you put it back on and it's where you start applying the new gasket, peeling off the backing paper as you go.



When you reach the starting point, cut the gasket so the ends butt together.

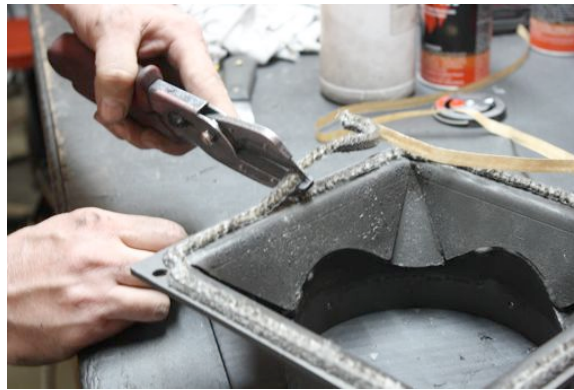

Place the collar back on the stove, put a little antiseize on the bolt threads, then screw in the four bolts. Tighten using the 1/2" wrench or socket, remembering to position the edge with the notch facing the back of the stove. The gasket procedure for the cover plate is exactly the same.

We need your help! Woodstock Soapstone Co. takes pride in providing the highest quality products as well as the best customer service in our industry. We welcome your suggestions and input to help us achieve these goals. If you have any comments to improve our products, service, and information provided in these instructions please contact us at (800) 866-4344 or info@woodstove.com. Thank you.

Revised 4/30/19