

## Replacing the Interior Corner Stones for The Progress Hybrid

**Please read all the instructions before you begin the procedure.** Confirm that you have all the necessary tools and materials. If you have any questions, technical support is available toll free at 1-800-866-4344, Monday-Saturday 9:00 – 5:00 ET


### Tools Needed:

- 7/16" socket and ratchet (or open end wrench)
- Vacuum
- Putty knife

### Materials Needed:

- Replacement corner stone (front or rear)
- Furnace cement

1. Make sure the stove is cool and no hot embers are inside the firebox. It may be helpful to vacuum the inside of the door frame.
2. The front and rear interior corner stones near the load door are held in place with a retainer and furnace cement. The front stone retainer is held in place with the top door frame bolt. The rear stone retainer is held in place with the lower door frame bolt.

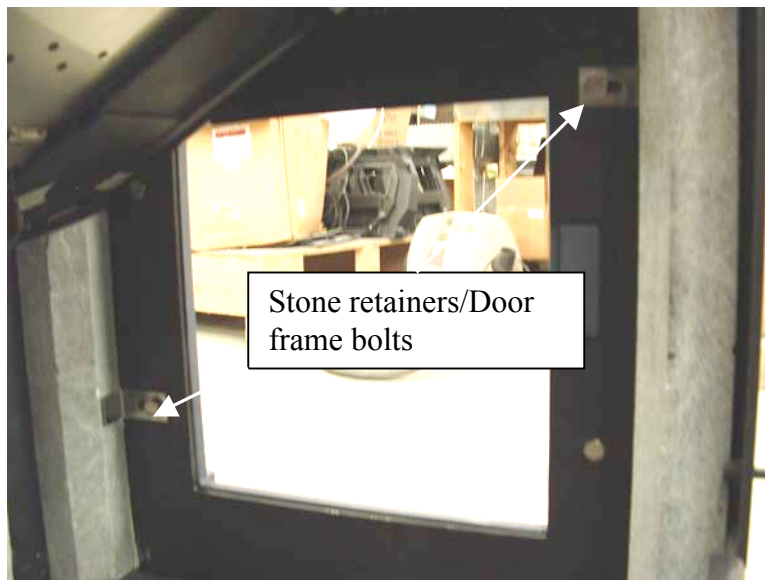

3. Use a 7/16" socket or wrench to remove the door frame bolt and retainer for the stone being replaced.
4. It will be necessary to chip away the furnace cement between the corner stone and the stone under the door. Be careful to not damage the door stone.

5. Vacuum any residual cement out of the stove. Place the new stone in the stove. Secure it with the stone retainer.
6. Seal the gap between the corner stone and the stone under the door with furnace cement. Smooth out any residual cement with a putty knife or your finger.

