

## Absolute Steel Air Tube Replacement

Please read all the instructions before you begin the procedure. Confirm that you have all the necessary tools and materials. If you have any questions, technical support is available toll free at 1-800-866-4344, Monday-Saturday 9:00 – 5:00 ET


### **Tools Needed:**

- 7/16" wrench or socket
- 3/4" wrench or socket
- 1/2" wrench or socket
- screwdriver


1. Start by opening and removing the loading door. It is HEAVY so get a good grip on it. Push up the hinge pins from below and pull them out. Set aside.



2. Use a 1/2" wrench or socket to remove the nut from the end of the damper rod and remove rod. Set aside.

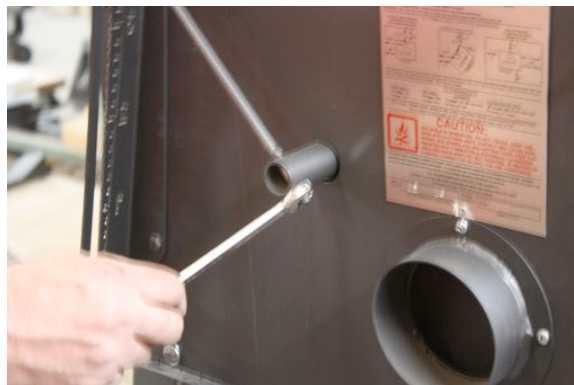

3. The rear panel of the stove is fastened in 7 places. Use a 7/16" wrench or socket to remove all the nuts, bolts, and washers.

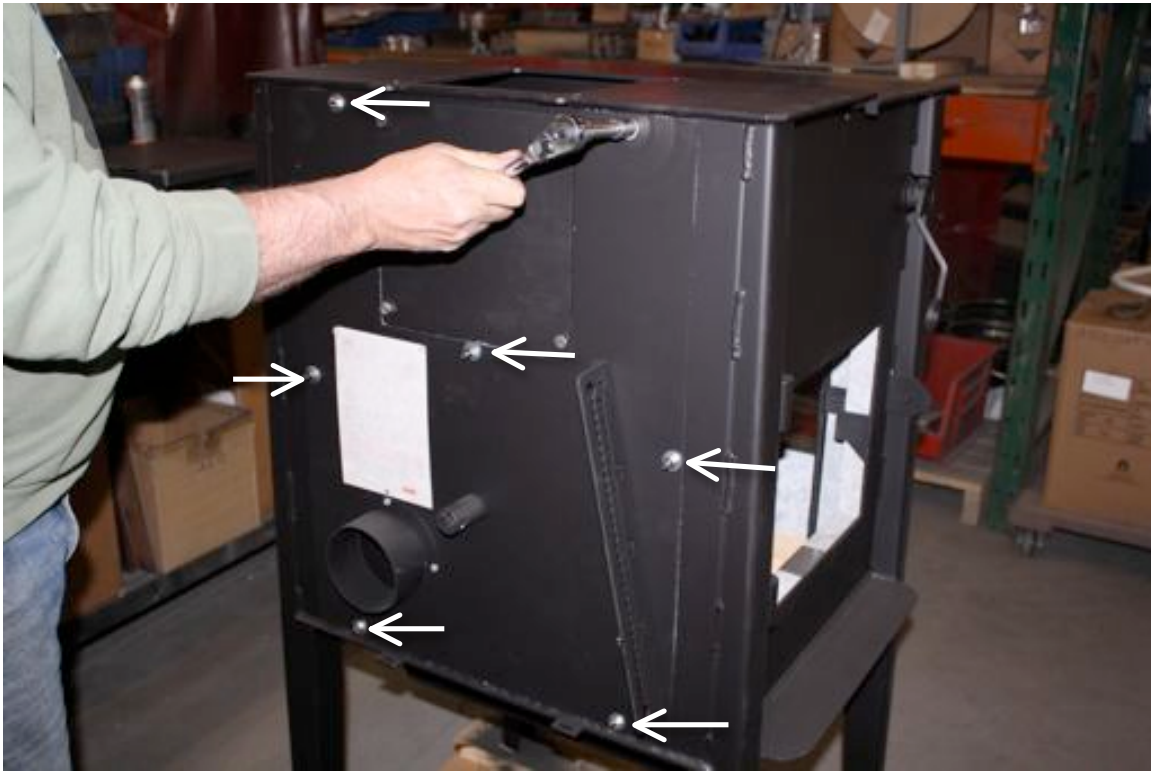

4. Remove the back panel of the stove to expose the two air jets.



5. Use a 3/4" socket to remove the 2 air jet bolts. Set aside.

6. Open the ashpan door and remove ashpan, if present. Put your hand into the ashpan housing and push the ash grate up from below so you can pull it out through the loading door.



7. With the ash grate out, remove the 3 pieces of firebrick from the rear wall of the stove.



8. Insert a screwdriver through air jet hole on the back of the stove. Pull up, then push in so you can remove the air tube from inside the stove. Repeat for the second air tube on the other side of the stove.





9. To install new air tubes and air jets, follow all of the above procedures in reverse order.

**We need your help!** Woodstock Soapstone Co. takes pride in providing the highest quality products as well as the best customer service in our industry. We welcome your suggestions and input to help us achieve these goals. If you have any comments to improve our products, service, and information provided in these instructions please contact us at (800) 866-4344 or [info@woodstove.com](mailto:info@woodstove.com). Thank you.

Revised 4/22/19